

# CVM 144

Three-phase power analyzer(balanced and unbalanced) for panel mounting



## Description

Three-phase power analyzer(balanced and unbalanced) for its assembly on 144 x 144 mm panels, measuring in 2 quadrants.

Other features include:

- Current measuring .../5 A
- Communication protocol: Modbus RTU, Modbus TCP, Johnson Controls
- Connections: RS-232, RS-485, Ethernet
- Expandable input/output modules
- ITF Technology: galvanic insulation protection inputs inputs, depending on the type.
- Maximeter function (A / A III / kW III / KV·A III).
- Default page selection
- Varied measuring ranges (110, 520, 866 Vph-ph)
- Incorrect connection detection (LED flashing).

## Features

<b>Power supply circuit</b>	230 Vac (-15...+10%). For other values, see the coding table
Consumption	5 V·A
Frequency	45..0.65 Hz
<b>Metering circuit</b>	
Nominal voltage	300 Vac (ph-n) / 520 Vac (ph-ph)
Frequency	45..0.65 Hz
Current consumption of the circuit	0.75 V·A
Nominal current	... / 5 A
Overload (permanent)	1.2 I <sub>n</sub>
<b>Class/Accuracy</b>	
Voltage	0.5 % ± 2 digits
Current	0.5 % ± 2 digits
Power ratings	1 % ± 2 digits
<b>Type of output</b>	Relay
Maximum switching voltage	250 Vac
Maximum switching voltage	750 V·A
Maximum switching current	3 A
Mechanical working life	3 x 10 <sup>7</sup> operations
Maximum impulse frequency	1 impulse / s
<b>Ambient conditions</b>	
Operating temperature	-10 ... +50 °C
Relative humidity (non-condensing)	5 ... 95%
<b>Build features</b>	
Type of box	VO self-extinguishing plastic
Degree of protection	Fitted unit (frontal) Non-fitted unit (sides and rear cover)
Dimensions	IP 54 IP 31
Weight	144 x 144 x 76 mm 400 g
<b>Safety</b>	
Designed for CAT III 300/520 Vac installations, in accordance with EN 61010 Double-insulated electric shock protection, class II	
<b>Standards</b>	
IEC 664, VDE 0110, UL 94, IEC 348, IEC 571-1, EN 61000-6-3, EN 61000-6-1, EN 61010-1	

## Application

- Applied to the control of switchboards and low and medium voltage connection points
- Alarm station, fully programmable variables controlled, maximum value, minimum value and delay
- Control of instantaneous values, maximum and minimum values of the electrical parameters metered
- Multiple-converter function with its analogue outputs 0/4..20 mA
- Leakage current and neutral metering function

## CVM 144

Three-phase power analyzer  
(balanced and unbalanced) for panel mounting



### References

Quadrants	Class (VA)	Communications	Protocol	Digital outputs	Analogue outputs	Digital inputs	Analogue inputs	Harmonics	Current leakages / neutral	Type	Code
-----------	------------	----------------	----------	-----------------	------------------	----------------	-----------------	-----------	----------------------------	------	------

### EXPANDABLE EQUIPMENT

2	0,5	-	-	-	-	-	-	-	-	CVM 144	M50600
2	0,5	-	-	-	-	-	-	-	-	CVM 144-ITF	M50700
2	0,5	-	-	-	-	-	-	U/I (31°)	-	CVM 144-ITF-HAR	M50A60
2	0,5	Ethernet	Modbus / TCP	-	-	-	-	-	-	CVM 144-ITF-Ethernet-TCP	M50790
2	0,5	RS-485	Profibus DP	-	-	-	-	-	-	CVM 144-ITF-Profibus	M50730
2	0,5	RS-485	Johnson Controls	-	-	-	-	-	-	CVM 144-ITF-Johnson Controls	M50C10

### EXCHANGEABLE MODULES (for expandable equipment)

-	-	-	-	2	-	-	-	-	Yes	CVM 144-C2-Currents Module	M51001
-	-	RS-485	Modbus / RTU	2	-	-	-	-	-	CVM 144-RS-485-C2 Module	M51010
-	-	RS-485	Modbus / RTU	2	-	-	-	-	Yes	CVM 144-RS-485-C2-Currents Module	M51011
-	-	RS-485	Modbus / RTU	2	-	4	-	-	-	CVM 144-RS-485-C2-Digital Module	M51016
-	-	RS-232	Modbus / RTU	2	-	-	-	-	-	CVM 144-RS-232-C2 Module	M51020

### COMPLETE EQUIPMENT

2	0,5	RS-485	Modbus / RTU	2	-	-	-	-	-	CVM 144-ITF-RS-485-C2	M50710
2	0,5	RS-485	Modbus / RTU	2	4	-	-	-	-	CVM 144-ITF-RS-485-C2-A4O	M50A14
2	0,5	RS-485	Modbus / RTU	2	2	-	2	-	-	CVM 144-ITF-RS-485-C2-A2I/2O	M50A18
2	0,5	Ethernet	Modbus / TCP	2	2	-	2	-	-	CVM 144-ITF-Ethernet-C2-A2I/2O-TCP	M50A98
2	0,5	Ethernet	Modbus / TCP	2	-	-	-	-	Yes	CVM 144-ITF-Ethernet-C2-currents-TCP	M50791
2	0,5	RS-485	Profibus DP	2	2	-	2	-	-	CVM 144-ITF-Profibus-C2-A2I/2O	M50A38
2	0,5	RS-485	Profibus DP	2	-	-	-	-	Yes	CVM 144-ITF-Profibus-C2-Currents	M50741
2	0,5	RS-485	Johnson Controls	2	-	-	-	-	Yes	CVM 144-ITF-Johnson Controls-C2-currents	M50C11

# CVM 144


Three-phase power analyzer  
(balanced and unbalanced) for panel mounting



## Coding table


M	5	X	X	X	0	0	X	X	X
Code	Internal Code								
Power Supply Voltage (PSV)	Standard (230 Vac)								
	110 Vac	1							
	400 Vac	3							
	480 Vac	4							
	24..0.120 Vdc	5							
Voltage metered (VM)	Standard (300 V <sub>ph-n</sub> /520 V <sub>ph-ph</sub> )								
	63.5 V <sub>ph-n</sub> / 110 V <sub>ph-ph</sub>	1							
	500 V <sub>ph-n</sub> / 866 V <sub>ph-ph</sub>	3							
Current input (CI)	Standard (.../5 A)								
	.../1 A (Only ITF)	0							

## Dimensions

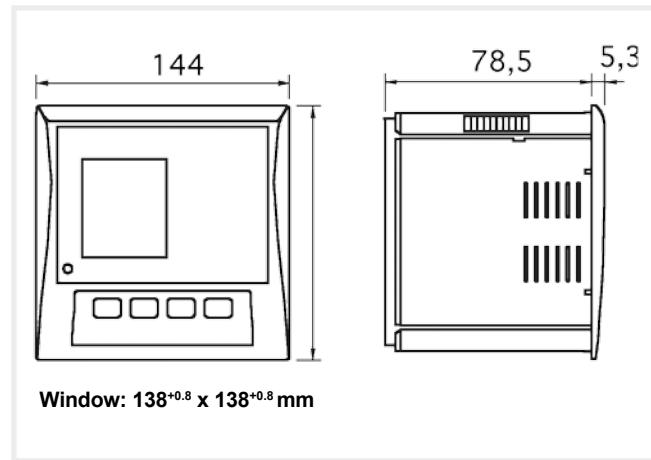


## Connections

CVM 144

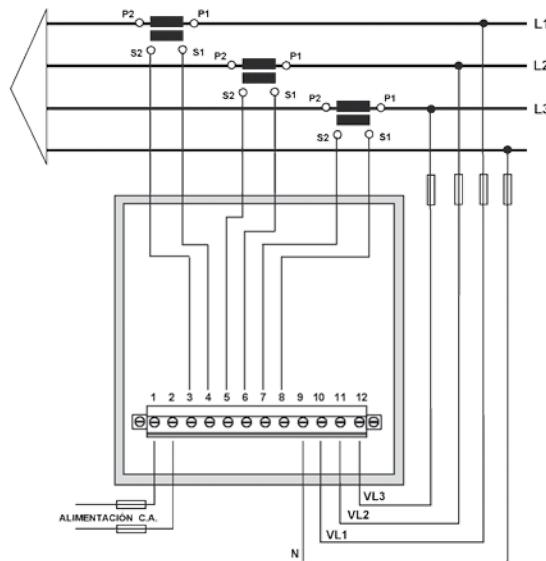

Three-phase networks - 4 wires (low voltage)

CVM 144

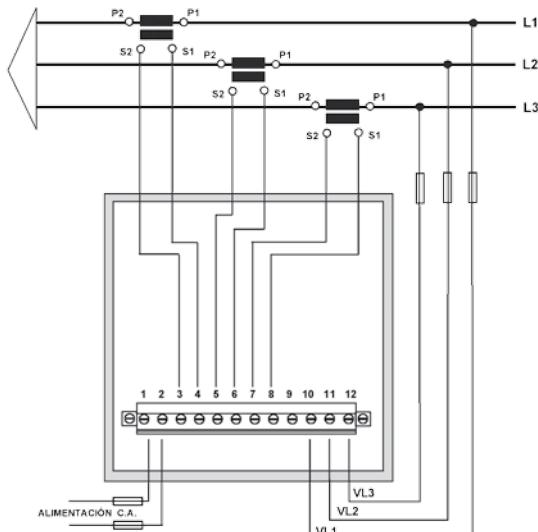

Three-phase networks - 3 wires (low voltage)

See the user manual for other types of connections