# Outside Air Temperature Sensors with Rad Shield

Issue Number: 7.0 Date of Issue: 15/12/2016



### **Features & Benefits**

- Weatherproof Housing
- Wide range of sensing element types
- PTFE Radiation shield version to minimize errors from gains of the effects of direct sunlight
- Hinged lid with the facility of tamper proofing

# **Technical Overview**

This range of temperature sensors are used to detect air outside temperature. Units contain either a high quality thermistor, Nickel or Platinum sensing element. The TT-332's sensing element is fitted into a PTFE radiation shield, which is designed to provide fast response times to changes in temperature and to protect the element from the direct effects of direct sunlight.

The -CVO active output option combines 4 pre-set ranges and selectable output mode, customised output range scaling enabling a choice of outputs and ranges on one unit.

### **Product Codes**

TT-332 Outside Air Sensor with radiation shield

Sensing Element (add type to above code)

Passive output:

-A (10K3A1) Trend, Cylon, Distech-B (10K4A1) Andover, Delta Controls

-C (20K6A1) Honeywell -D (PT100a) Serck -E (PT1000a) Cylon

**-E** (PT1000a) Cylon **-F** (NI1000a) Sauter

-G (Ni1000a/TCR(LAN1)) Siemens

**-H** (SAT1) Satchwell **-K** (STA1) Landis & Staefa

-L (TAC1) TAC

-M (2.2K3A1) Johnson Controls

-N (3K3A1) Alerton
-P (30K6A1) Drayton
-Q (50K6A1) Ambiflex
-R (100K6A1) York >40°C
-S (SAT2) Satchwell
-T (SAT3) Satchwell

-V (SAT4) Satchwell -W (SIE1) Siebe

-Y (STA2) Landis & Staefa-Z (10K NTC) Carel

Active output:

**-CVO** 4-20mA/0-10Vdc selectable output

**-CVO-C** 4-20mA/0-10Vdc selectable output with custom

temp. scaling

# **Specification**

Output types:

Passive Resistive

Active (selectable) Current 4-20mA or

Voltage 0-10Vdc

Accuracy:

Probe:

Material PTFE

Dimensions 40 x 16mm dia.

Housing:

Material ABS (flame retardant type VO)

Dimensions 75 x 70 x 50mm

Protection:

Snap-shut lid IP54

IP65 (See installation notes)

Ambient range -30 to 70°C
Weight 160g
Country of origin UK

WEEE Directive:

At the end of the products useful life please dispose as per the local regulations.

Do not dispose of with normal household waste.

Do not burn.

 $\epsilon$ 

The TT-332-CVO products referred to in this data sheet meet the requirements of EU Directive 2014/30/EU



# Outside Air Temperature Sensors with Rad Shield

Issue Number: 7.0 Date of Issue: 15/12/2016

# Installation

- 1. Select a suitable location, the sensor has a radiation shield that helps minimizes error gains from direct sunlight
- 2. Using the housing as a template mark the hole centres, drill and fix the housing to a flat surface using appropriate screws. The housing is designed to make it easy for an electric screwdriver to be used if desired.
- 3. Release the snap-fit lid by gently squeezing the locking tab.
- 4. Feed the cable through the waterproof gland and terminate the cores at the terminal block, leaving some slack inside the unit, tighten the cable gland onto the cable to ensure water tightness.
- 5. It is recommended that the unit be mounted with the cable entry at the bottom. If the cable is fed from above then into the cable gland at the bottom, it is recommended that a rain loop be placed in the cable before entry into the sensor.
- 6. Snap shut the lid after the connections have been made if IP65 protection is required, secure the lid with two screws provided


#### **Connections**

All connections to BEMS controllers, data recorders etc. should be made using screened cable. Normally, the screen should be earthed at one end only (usually the controller end) to avoid earth hum loops which can create noise. Low voltage signal and supply cables should be routed separately from high voltage or mains cabling. Separate conduit or cable trays should be used. Where possible, the controller's earth should be connected to a FUNCTIONAL EARTH, rather than the mains safety earth. This will provide better immunity to high frequency noise. Most modern buildings have a separate earth for this purpose.

Passive output:



Connections are made via the 2-way terminal block. Connections for thermistor, platinum and nickel sensing elements are polarity independent.

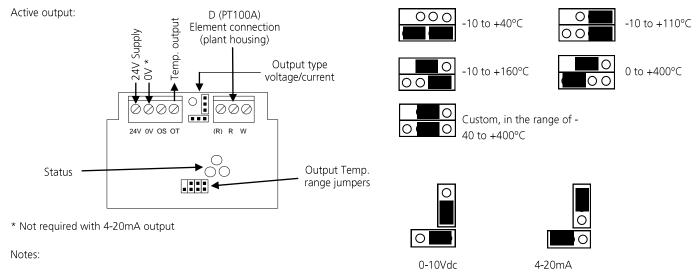

Voltage output Nominal voltage 24Vac/dc.

Current output If using in current output mode, the sensor must only be used with a 24Vdc supply. The sensor may be damaged if supplied

with AC.

The selectable output temperature ranges are dependent on sensor type, ambient and application.

For full connection and specification please refer to the TT-CVO data sheet.

Whilst every effort has been made to ensure the accuracy of this specification, Sontay cannot accept responsibility for damage, injury, loss or expense from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.